


INSTALLATION MODE FOR 2" TANDEM PANEL P-224



Connection

- 1- Hook filters together by placing the bottom hole of the filter B on the pin of the filter A.
- 2- Latches the top of the filters A and B together.
- 3- Connect the TD (Tandem) wires from B to A.
- 4- Repeat for the following filters.

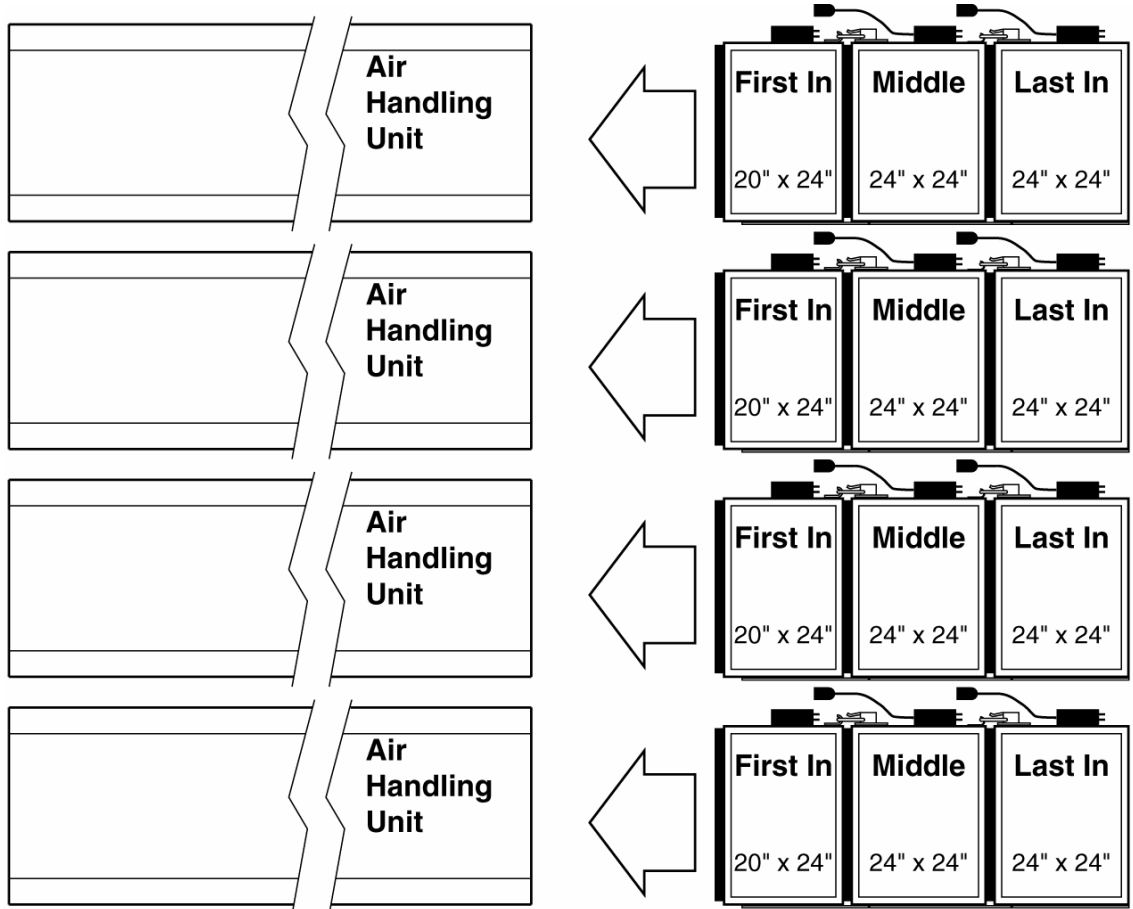